

# PurgeGuard™

## Wiring Instructions

Literature File No. 1110-01


**Redi Controls model...**

**PRG-11/123C**

**or**

**PRG-113C**

**Microprocessor Controlled**

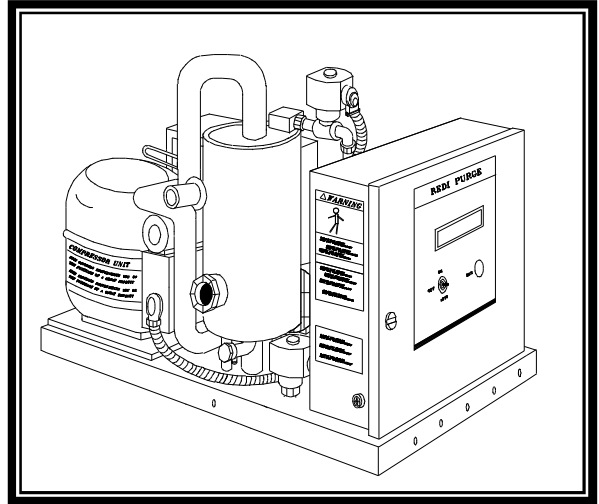

**WARNING:** Before proceeding with the following wiring modifications be sure to open and lock-out all electrical disconnects to prevent possible injury or death caused by electrical shock.

**☞ See Wiring Schematic on Back of this Page •**

- 1) Locate wire (indicated **X** on wiring diagram) from **RLY2 N.O.** contacts connected to **TB2-5**. Remove wire from **TB2-5** and **cut off spade connector and strip wire**.
- 2) Wire-nut this wire together with the **Yellow** wire from the **PURGE GUARD™**.)
- 3) Connect **Blue** wire from the **PURGE GUARD™** TO **TB2-5**.
- 4) Connect **White** wire from the **PURGE GUARD™** to **TB2-8, 9** or **10**.
- 5) Connect **Black** wire from the **PURGE GUARD™** to **TB1-1** or **2**.
- 6) Connect **Green** ground wire from the **PURGE GUARD™** to the control panel ground lug.

**Wiring of PURGE GUARD™ is now complete.** Please refer to Control **Set-up** and **Operation** instructions in the **Installation and Operation Manual**.

Revised Technically as of November 1, 2001

This Copy was printed as of January 4, 2006

© 2001 REDI CONTROLS, INC., GREENWOOD, INDIANA

# Purge Guard Wiring For... PRG-11/123-C & PRG-113-C

--- X = wire removed from TB2-5

